

Key Features:

Extreme Accuracy

- ± 0.5 ns pixel jitter
- 47 dB S/N ratio
- Gain, black level, and phase adjustments

High Performance

- Real-time video streaming with AVI file creation
- 250+ MB/second sustained 64 bit/66 MHz PCI bus transfers
- Simultaneous real-time transfer to memory and display

Video

- Up to 170 MHz pixel rate
- Up to 2048 x 2048
- Includes 1600 x 1200 x 60 Hz & 1280 x 1024 x 85 Hz
- Non-standard and standard video inputs
- 24 bit DVI, RGB, YPbPr, HDTV & 8 bit monochrome
- Video output (loop-through)
- DDC compliant

Software

- Windows XP, Vista
- Auto-SYNC
- Video for Windows driver
- Example programs with source code

Auto-SYNC automatically analyzes the incoming video signal and builds a configuration file. Use the configuration file as created or utilize the Auto-SYNC Wizard for simple, step-by-step video adjustments. AccuStream is supported by the IDEA (Imaging Development Environment for Applications) software development kit. By using IDEA™, developers have the confidence of knowing that they can write their applications once and have support built-in for the entire AccuStream Series. A Video for Windows driver and a TWAIN driver are included to further simplify development and use of AccuStream. With IDEA, ActiveX controls are provided to facilitate easy development with Visual Basic, Visual C++, and Visual J++. Extensive example programs (with source code) are provided with IDEA. Functions of the example programs include triggered acquisition, video streaming to AVI files, integration with Pegasus Imaging compression for streaming, overlays, and much more. Auto-SYNC, IDEA, example programs, and drivers are provided free of charge with each AccuStream.

Applications

AccuStream is ideal for any application requiring high resolution and high performance imaging. With the lower priced AccuStream 50+ and 75+, AccuStream is also perfect for those high performance applications involving lower resolution video formats. Some of the popular applications for AccuStream include voyage data recorders (maritime imaging), military imaging, flight simulation, display monitoring, high-end multimedia, medical imaging, display monitoring, multimedia testing, and much more.

Voyage data recorders: Acquire from high resolution ship radar screens.

Flight simulation: Acquire from high resolution simulation displays.


Medical imaging: Acquire from virtually any medical imaging device.

Display monitoring: Acquire from high resolution displays.

Military imaging: Acquire from high resolution video screens for command & control.

High Resolution DVI, RGB, HDTV & Monochrome

The AccuStream™ Series of frame grabbers and video streamers is the most advanced, most versatile series of products from Foresight Imaging. AccuStream captures DVI, RGB, YPbPr, HDTV, and monochrome video signals at up to 170 MHz pixel rates and up to 2048 x 2048 pixel resolution. The extreme performance of AccuStream is due to the 64 bit, 66 MHz PCI bus design, delivering sustained performance to system memory of 250 MB/second. For example, AccuStream can stream to memory 1280 x 1024 x 60 Hz video without dropping any frames. In addition to 64 bit, 66 MHz PCI, AccuStream is compatible with 32 bit PCI and PCI-X slots. The AccuStream Series is available in three versions, differing only in maximum pixel rate input: AccuStream 50+, AccuStream 75+, and AccuStream 170+.

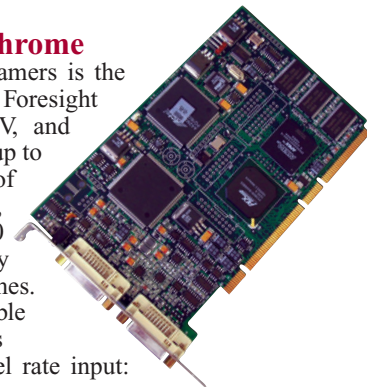

Accuracy

The AccuStream continues in the Foresight Imaging tradition of delivering extreme accuracy and image quality for demanding customers with high resolution and precision applications. Extremely low pixel jitter of ± 0.5 ns, superior analog design, and a 47 dB signal-to-noise ratio provide the accuracy and image fidelity required of high performance applications. Color video digitization is performed at 8 bits each of R, G, and B (24 bits per pixel) or 24 bit YPbPr. Monochrome acquisitions are at 8 bits per pixel. Pixel formats include RGB 24, RGB 32, RGB 5:5:5, RGB 8, YCbCr 4:2:2, YCbCr 4:4:4, and 8 bit monochrome.

Performance

AccuStream achieves its extreme 250 MB/second sustained performance via its 64 bit, 66 MHz PCI bus mastering design, scatter-gather technology, and double buffering. This high performance requires minimal CPU intervention so that the processor is free to work on other tasks or process the data immediately. Real-time display is simultaneously enabled by real-time transfer of image data directly to display card memory over the bus. AccuStream also features independent, dual video data paths, allowing for the simultaneous DirectDraw display of YCbCr 4:2:2 color video and the transfer of full 24 bit RGB video data for processing.

Video


AccuStream acquires images and video streams from both non-standard and standard video inputs up to 170 MHz DVI, RGB, YPbPr, HDTV, and monochrome. Input resolution is up to 4 megapixels total area. Active DVI, RGB, YPbPr, or monochrome loop-through output is provided. This feature eliminates the need for a separate, active video splitter to ensure high quality video input. For fine-tuning of the video signal, gain, black level, white balance, and phase controls are provided. Separate H and V sync are supported. An external trigger is available. AccuStream is fully compliant with the Display Data Channel (DDC) specification of DVI. It also features DVI Hot Plug Detect and Digital Monitor Emulation.

Software

AccuStream is supported by Auto-SYNC™, Foresight Imaging's flagship automatic configuration software. Auto-SYNC ensures quick and simple installation and image capture by automatically configuring AccuStream to the incoming standard or non-standard video signal.

AccuStream 50+, 75+, & 170+ Specifications

ACCUSTREAM 50+, 75+, & 170+ Block Diagram

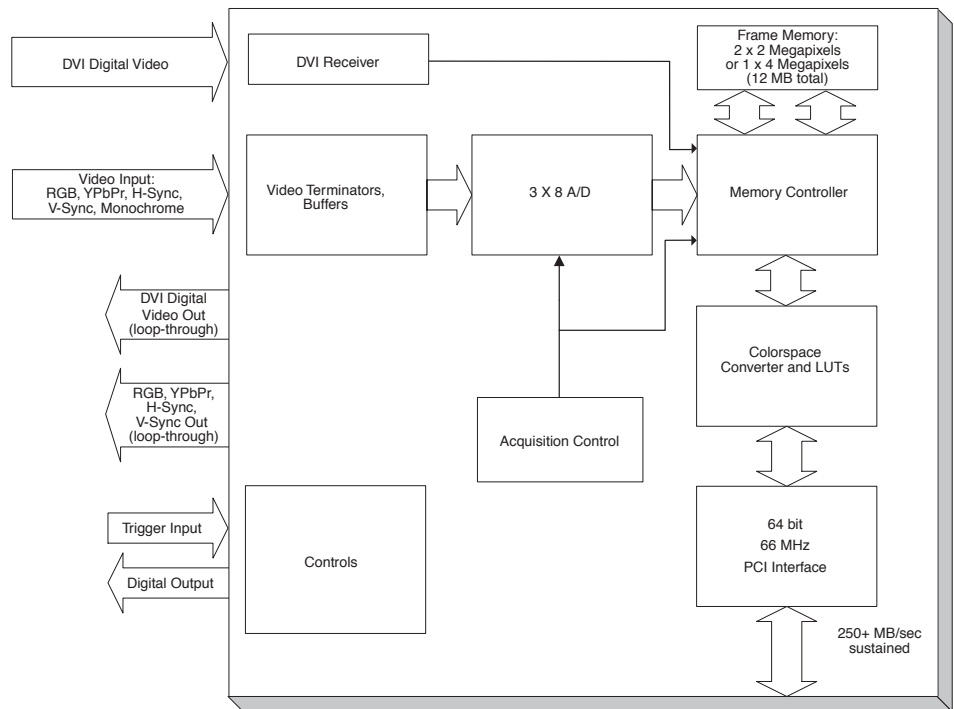

Video - Analog

- Video input: RGB (one), YPbPr (one), or monochrome (up to three)
- Non-standard and standard video resolutions and frequencies
- Input range: 0.5 V pp to 1.0 V pp
- Offset: -1.0 V to 2.0 V DC
- 75 ohm termination
- 8 bit gain, 8 bit black level, white balance, phase adjustment
- AC coupled with DC restoration
- H and V sync input
- Bandwidth: 330 MHz
- Pixel rate: up to 170 MHz, 50 MHz for AccuStream 50+, 75 MHz for AccuStream 75+
- Horizontal frequency: up to 105 kHz
- Pixel resolution: up to 4 megapixels total area

Video - Digital

- DVI 1.0 compatible receiver
- Supports display resolutions up to UXGA (1600 x 1200 at 60 Hz)
- The receiver operates with true color (24-bit) panels in 1 or 2 pixel(s)/clock mode and features an intrapixel skew tolerance of up to one full clock cycle
- 170 MHz operation, 50 MHz for AccuStream 50+, 75 MHz for AccuStream 75+

Controls

- Trigger input

Pass-Thru

Analog

- The Red, Green, Blue, H and V Syncs from the input connector are buffered and sent out through a second DVI-I connector
- Pass-thru R, G, B signals output impedance - 75 Ohms

Digital

- The four differential DVI pairs from the input connector are retransmitted by means of a DVI 1.0 compliant transmitter and sent out the second DVI-I connector
- Transmitter differential voltage single-ended peak to peak amplitude 310 mV min, 370 mV typical, 430 mV max

Image Quality

- Pixel jitter: ± 0.5 ns
- S/N ratio: 47 dB
- Linearity: Better than 99%
- Gain and offset stability: 1% from 15°C to 40°C
- Synchronization time: less than 250 μ s
- A/D conversion: 8 bits each of R, G, & B (24 bits per pixel), 24 bits YPbPr
- Color formats: RGB 24, RGB 32, RGB 5:5:5, RGB 8, YCbCr 4:2:2, YCbCr 4:4:4, 8 bit monochrome

Performance

- 250+ MB/second sustained to system memory via 64 bit, 66 MHz PCI bus master
- Real-time video streaming
- Real-time transfer to VGA memory
- Storage memory: 4 megapixels, 12 MB total

Physical

- Half-size PCI card (length 6.6 inches, height: 4.2 inches)
- Two female DVI-I connectors
- One 2.5 mm stereo audio jack for trigger
- 64 bit, 66 MHz PCI; 32 bit 33/66 MHz PCI; PCI-X compatible
- 3.3 volt and 5.0 volt PCI compatible

Cabling

- DVI to DVI cable (optional)
- DVI to VGA cable (15 pin D-shell) (optional)
- DVI to VGA cable (5 BNC) (optional)
- Trigger cable (optional)

Software

- Windows XP, Vista
- Video for Windows driver
- Auto-SYNC automatic configuration software
- Example application programs (source code included)
- Real-time video streaming with AVI file creation
- IDEA software development kit
- ActiveX controls
- TWAIN driver



978-458-4624
info@fi-llc.com
www.fi-llc.com